

Paramétrage du « Spanningtree » sur un DWS-4026

→ Accès via un terminal :

Tera Term: Config. port série		
Port:	СОМ1 • ОК	
Vitesse:	115200 -	
Données:	8 bit Effacer	
Parité:	none •	
Stop:	1 bit	
Ctrl. de flux:	none •	
Délai de transmission 0 msec/car 0 msec/ligne		

- ➔ Il n'y a pas de mot de passe, donc on appuie sur « Entrée ».
- → On saisit la commande « **enable** », pour accéder en mode privilège.







→ Pour accéder au mode de configuration, saisissez « configure »

(DWS-4026) #configure (DWS-4026) (Config)#

→ Pour connaître les commandes, il suffit de saisir. « Spanning tree? »

(DWS-4026) (Config)#spanning-tree ?		
Kcr> Press enter to execute the command. bpdufilter Enable portfast by default on all access ports bpduguard Enable/Disable BPDU Guard.		
configuration Set the Configuration Identifier Name for the	5.	
forceversion Set the Force Protocol Version parameter.		
forward-time Set the Bridge Forward Delay parameter.		
Max-age Set the Bridge Max Age parameter.		
max-hops Set the Bridge Max Hops parameter.		
mst Configure a multiple spanning tree instance.		

→ On choisit la version de « spanning tree »

```
(DWS-4026) (Config)#spanning-tree forceversion ?

802.1d Set the Force Protocol Version parameter to 802.1d.

802.1s Set the Force Protocol Version parameter to 802.1s.

802.1w Set the Force Protocol Version parameter to 802.1w.

(DWS-4026) (Config)#spanning-tree forceversion 802.1w

(DWS-4026) (Config)#
```

 On active le « Spanning tree » sur tous les ports, par défaut ils seront en « edge ».

(DWS-4026) (Config)#spanning-tree port ? mode Enable/Disable a port for use by spanning tree. (DWS-4026) (Config)#spanning-tree port mode all

➔ On sélectionne les ports qui laisseront passer le BPDU, pour notre exemple ceux sont les ports 23 et 24.





(DWS-4026) (Config)#spanning-tree bpdumigrationcheck ?		
<slot∕port> all</slot∕port>	Enter an interface in slot/port format. Force all the ports to transmit RST or MST BPDUs.	
(DWS-4026) (Config)	#spanning-tree bpdumigrationcheck 0/23	
(DWS-4026) (Config)	#spanning-tree bpdumigrationcheck 0/24	

→ Pour forcer la **priorité STP.**

```
(DWS-4026) (Config)#spanning-tree configuration revision ?
<(0-65535> Enter an integer in the range of 0 - 65535.
(DWS-4026) (Config)#spanning-tree configuration name ?
<(name> Enter a string of at most 32 characters.
(DWS-4026) (Config)#spanning-tree configuration name
Command not found / Incomplete command. Use ? to list commands.
(DWS-4026) (Config)#spanning-tree configuration revision 0
(DWS-4026) (Config)#spanning-tree configuration revision 0
```

→ Pour sauvegarder, il faut sortir « exit » :

(DWS-4026) (Config)# (DWS-4026) (Config)#exit

➔ Pour visualiser l'état du « spanning tree »

(DWS-4026) #show spanning-tree	
Bridge Priority Bridge Identifier	0 00:00:00:17:9A:95:30:98
Time Since Topology Change Topology Change Count	0 day 0 hr 8 min 37 sec 2
Designated Root	PALSE 00:00:00:17:9A:95:30:98
Root Port Identifier	00:00 20
Bridge Max Hops. Bridge Tx Hold Count.	20
Bridge Forwarding Delay Hello Time	15 2
Bridge Hold Time CST Regional Root	6 00:00:00:17:9A:95:30:98
Regional Root Path Cost More or (q)uit∎	0





→ Et écrire le paramétrage dans la mémoire du switch.

(DWS-4026) #write ?
memory To permanently save configuration changes to NVRAM.
(DWS-4026) #write memory
This operation may take a few minutes.
Management interfaces will not be available during this time.
Are you sure you want to save? (y/n) y

