


WAN with PPPOE

Click “PPPoE Tunnels” under “Interfaces”

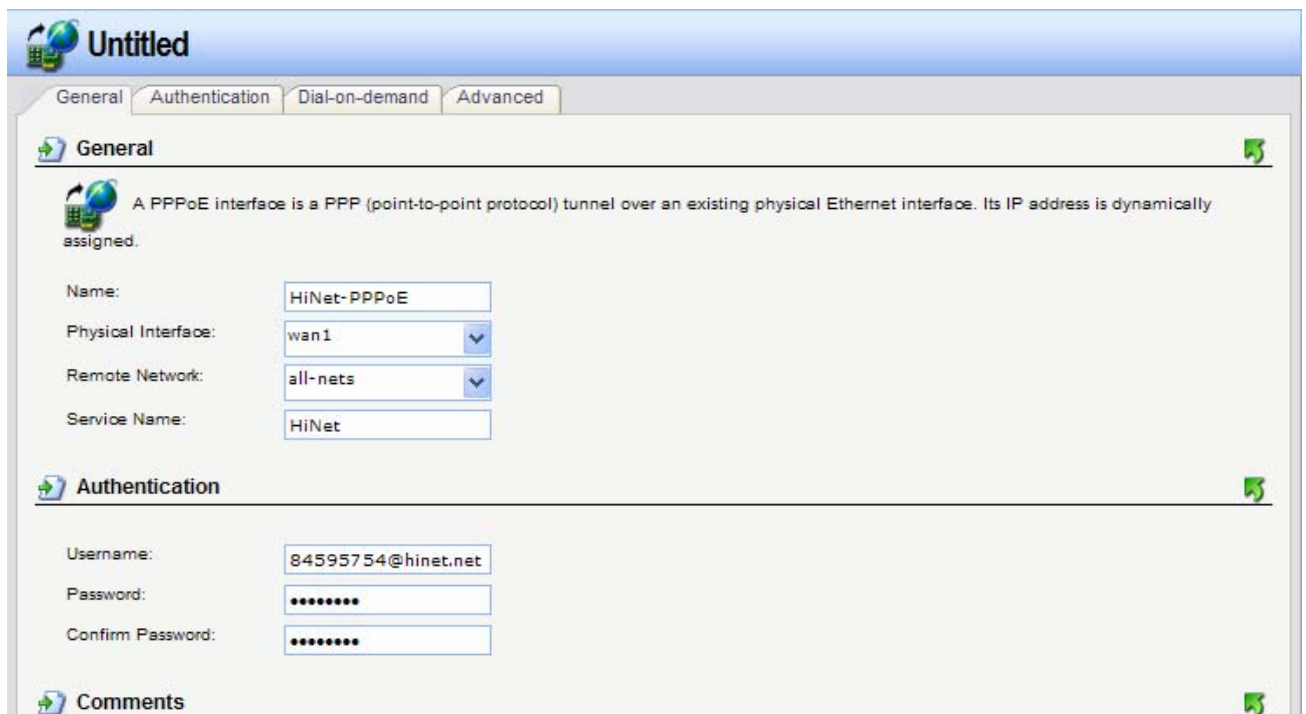

Apply correct Physical Interface, Remote Network, Username and Password in the object

A screenshot of a network configuration window titled 'Untitled'. The window has four tabs: 'General', 'Authentication', 'Dial-on-demand', and 'Advanced'. The 'General' tab is selected. Below the tabs, there is a section for 'General' with a description: 'A PPPoE interface is a PPP (point-to-point protocol) tunnel over an existing physical Ethernet interface. Its IP address is dynamically assigned.' Below the description are four fields: 'Name' (text input with value 'HiNet-PPPoE'), 'Physical Interface' (dropdown menu with value 'wan1'), 'Remote Network' (dropdown menu with value 'all-nets'), and 'Service Name' (text input with value 'HiNet'). Below this is an 'Authentication' section with three fields: 'Username' (text input with value '84595754@hinet.net'), 'Password' (password input with masked characters), and 'Confirm Password' (password input with masked characters). At the bottom is a 'Comments' section with a text area. Each section has a green arrow icon in the top right corner.

- Click “Save and Active”