

Grouping

Load Balancing

When Load Balancing is enabled, the maximum number of wireless stations connecting to the access point can be set to share the bandwidth within the same WLAN. The maximum number of stations that are able to associate to the access point can be determined by the network administrator through any of the configuration interfaces. Any other clients attempting to associate with the access point beyond the maximum connection will be denied. When there is more than one access point in the same group within the same WLAN, any other clients attempting to associate with the access point beyond the maximum connection will be deferred to another access point in the same group.

User Limit

Select user limit in this field, range cover from 0-64.

How to setup Grouping

Log on to the access point, default ip address 192.168.0.50 with username admin and no password. Go to the "Advanced" tab and then click on "Grouping" choose "Enable" on "Load Balancing" and type in the maximum number of clients that you want to allow on this access point.