


### DI-713P

Wireless Broadband Router

# 1

## Connecting the DI-713P Wireless Router to your network

*When you have completed the steps in this installation guide, your connected network may look something like this:*

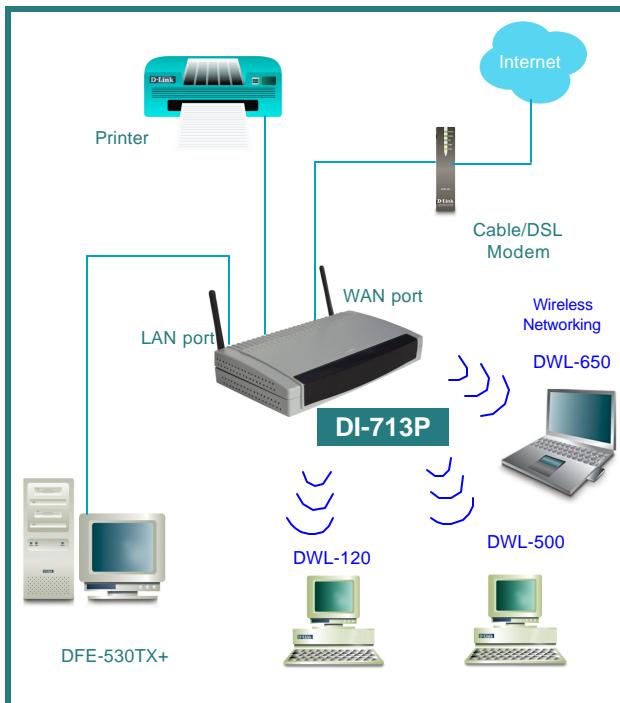

First,


Plug in the power supply as shown.  
The Power LED will turn on  
to indicate proper operation.



# 1

## Connecting the DI-713P Wireless Router to your network **continued**

Next, connect the WAN port to the Cable/DSL modem. The WAN LED will indicate connection.

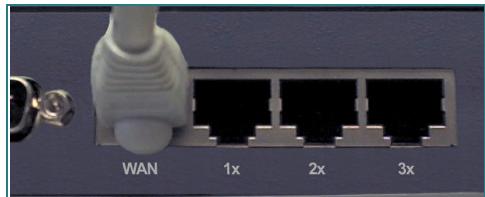

Finally, connect computers with ethernet adapters to one of the LAN ports on the DI-713P.



# 2


## Installing the DI-713P

### ***Checking the IP Address of the computer being used to configure the DI-713P Wireless Router***

**Go to Start>Run**


Type in “**WINIPCFG**”.

*The IP address of the computer must be between 192.168.0.2 and 192.168.0.254 in order to configure the router.*

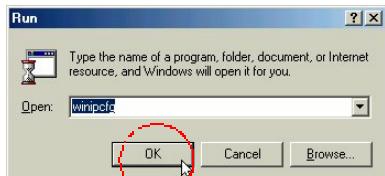

Click on the “**Release All**” and then on the “**Renew All**” button to obtain an IP address from the broadband router between 192.168.0.100. and 192.168.0.199.

*Note: If you are manually assigning a static IP, please refer to Appendix A.*

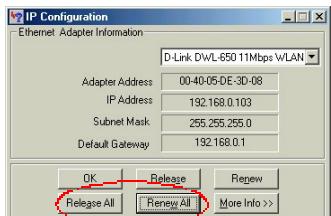


# 2

## Installing the DI-713P

Open the web browser, and type **192.168.0.1** into the URL address box.

*Note: Please disable any proxy server setting for the web browser.*

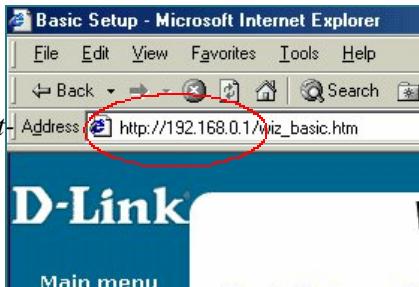


When the login screen appears, type "**admin**" in the "**System Password**" field.

**Click "Login."**




In the following "**Device Information**" screen, select "**Setup**."

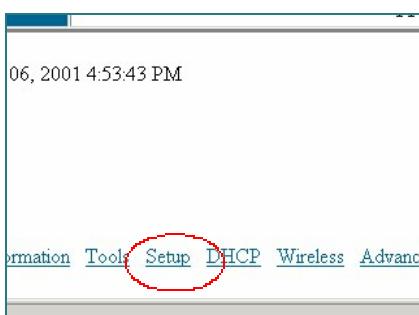

The default IP address of the LAN port is set to 192.168.0.1

By default, the WAN port is set to automatically obtain an IP address from the ISP.

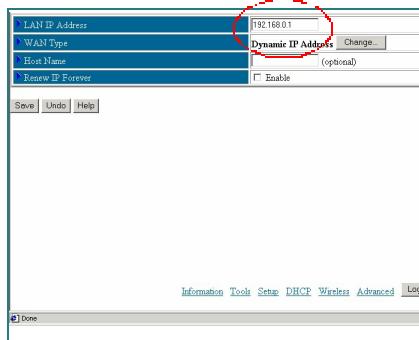

# 2

## Installing the DI-713P

### Cable modem users:

If you are using a cable modem, enter the “**Host name**” given by your cable provider.

Click on “**Save**” and “**Reboot**” to save changes.

LAN IP Address: 192.168.0.1  
WAN Type: Dynamic IP  
Host Name: cx305-b  
Renew IP Forever:  Enable

Save Undo Help Reboot

Saved! The change doesn't take effect until rebooting!

### DSL users:

From the setup screen, click on the “**Change**” button.

Setup

LAN IP Address: 192.168.0.1  
WAN Type: Dynamic IP Address [Change...](#)  
Host Name: (optional)  
Renew IP Forever:  Enable

Save Undo Help

At this screen, select “**PPP over Ethernet**.”

Click on “**Save**.”

Change WAN Type

<input type="radio"/> Static IP Address	ISP assigns you a static IP address.
<input type="radio"/> Dynamic IP Address	Obtain an IP address from ISP automatically.
<input checked="" type="radio"/> PPP over Ethernet	Some ISPs require the use of PPPoE to connect to the Internet.
<input type="radio"/> Dial-up Network	To surf the Internet via PSTN/ISDN.

Save Cancel

Enter the “**PPPoE account**” and “**PPPoE password**.”


Click “**Save**” and “**Reboot**” to save changes.

LAN IP Address: 192.168.0.1  
WAN Type: PPP over Ethernet [Change...](#)  
PPPoE Account: viatec  
PPPoE Password: pocket  
PPPoE Service Name: (optional)  
Assigned IP Address: 0.0.0.0 (optional)  
Maximum Idle Time: 300 seconds  
Primary DNS: 0.0.0.0  
Secondary DNS: 0.0.0.0

Save Undo Help Reboot

Saved! The change doesn't take effect until rebooting!

The DI-713P default wireless settings will work out of the box with any other D-Link products.

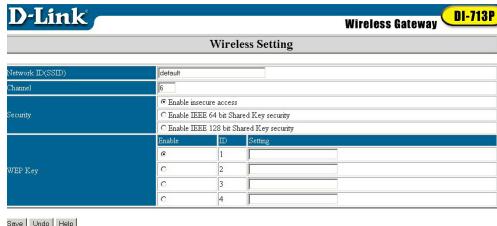

To enable WEP encryption, select the encryption type. (Enable either the 64 or the 128 bit encryption.)

Then enter the encryption key, as shown.

Note: Each key must consist of hex digits, which means that only digits 0-9 and letters A-F are valid.

Click **Save** and **Restart** the computer to save changes.


# 3

## Checking the connection to the Internet

To check the connection, open the web browser and go to your favorite website.

*If you are unable to browse, please do the following:*

1. Refer to Appendix B to check your connection to the wireless router.
2. Use “Help” on the Main Menu.
3. Refer to the troubleshooting section in the user’s manual.

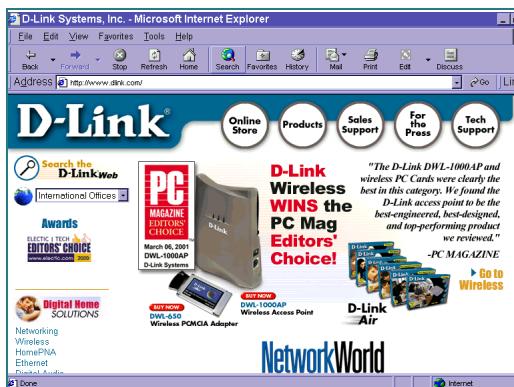

# APPENDIX

# A


## Assigning a Static IP Address

If the network adapter is unable to obtain an IP address automatically from the Broadband Router, then go to:

**START>SETTINGS>CONTROL  
PANEL>NETWORK>** highlight  
**“TCP/IP” and Click on “Properties.”**

Select the “IP Address” tab, and

**Click on “Specify an IP Address.”**

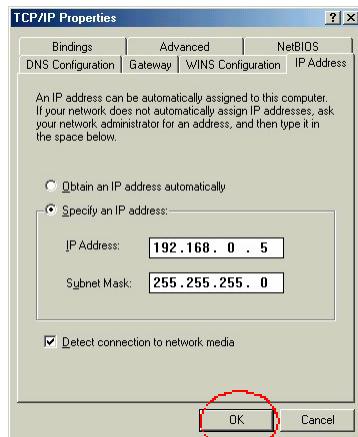

## APPENDIX

## B

### Checking Your Network Connections

Use “Ping” to check your network connections.

Go to **START>RUN**

Type “**command**” in the box.

**Click OK.**

Type “**ping 192.168.0.1**”, which is the IP address of the LAN port of the Broadband Router.

Hit the “**Enter**” key.

A successful connection will show four replies, as shown at left.

```
MS-DOS Prompt
Auto C:\WINDOWS\DESKTOP>cd..
C:\>ping 192.168.0.1

Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time<10ms TTL=64

Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>>-
```