

D-Link (Europe) Ltd.


4<sup>th</sup> Floor Merit House Edgware Road London NW9 5AB U.K.

Tel: +44-208-731 5555 Fax: +44-208-731 5511

## How to Install D-Link Print Server in the Microsoft Windows 2000 TCP/IP environment

To create a TCP/IP remote printer Microsoft TCP/IP printing support must be installed. The procedure is as follows.


1. To start the Add Printer Wizard, select Settings - Printers from the Start menu and doubleclick on the Add Printer icon.

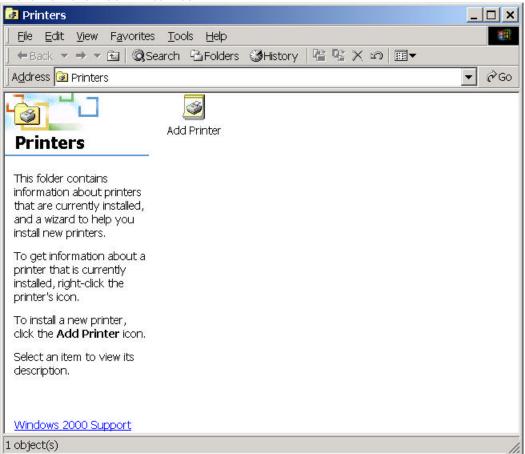


2. The Wizard asks you to select between Local printer and Network printer. Select Local printer (Disable Automatically detect my printer), as the DP-100/101/300/301/301P emulates a local printer port. Click Next>.



3. The Wizard asks you to select between Use the following port and Create a new port. Select Create a new port. Then Select Standard TCP/IP port and click Next>.

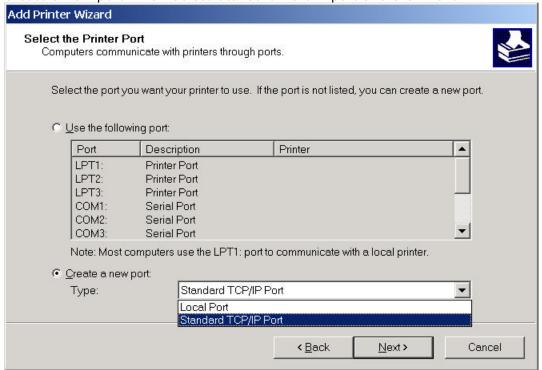


4. From the Add Standard TCP/IP Printer Port dialog, enter the IP address of your print server and define a logical port name. Click Next>.

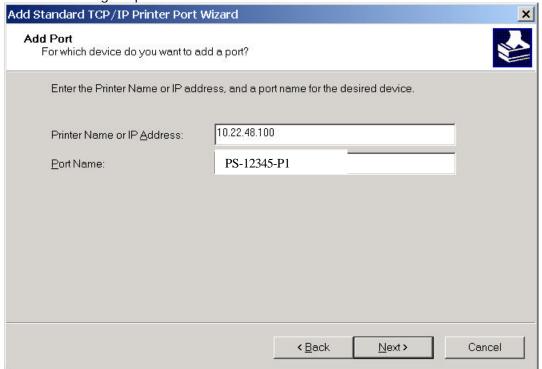


5. The Wizard asks you to select between Standard and Custom. Select Custom and click Setting.




6. From the Configure Standard TCP/IP Port dialog, select LPR and enter the port name of your print server you wish to use in the Queue Name field. Click OK.

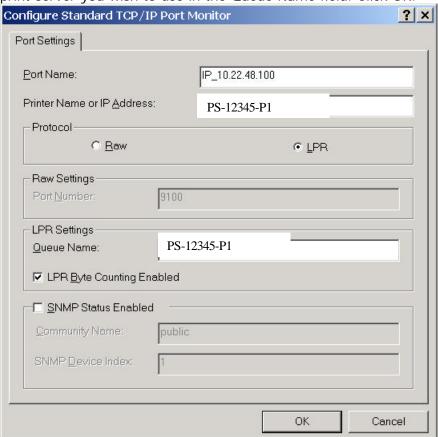


7. Choose an appropriate print driver for your printer.

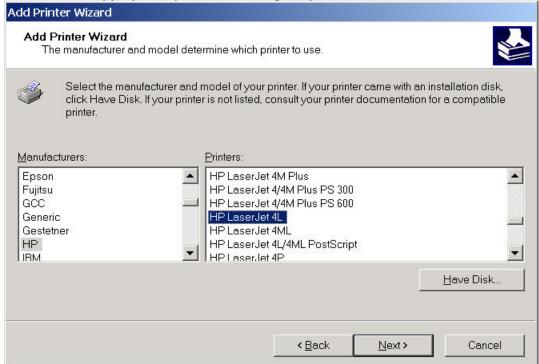


8. Enter an appropriate name for your printer.

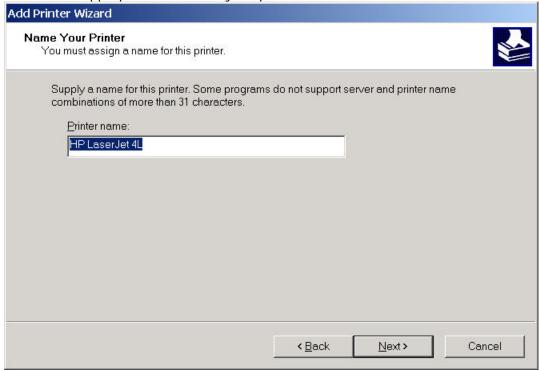

9. Choose whether you wish to share the printer with other network users and enter an appropriate name.

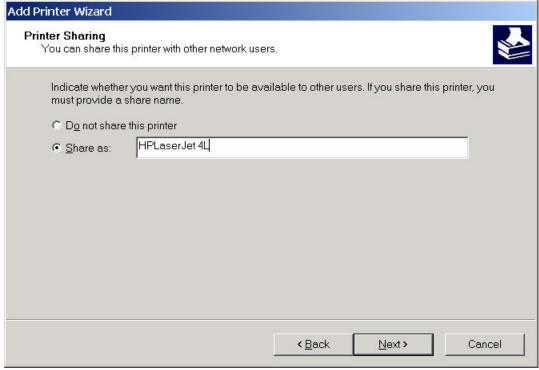

10. Choose Yes to confirm whether the printer is installed properly.

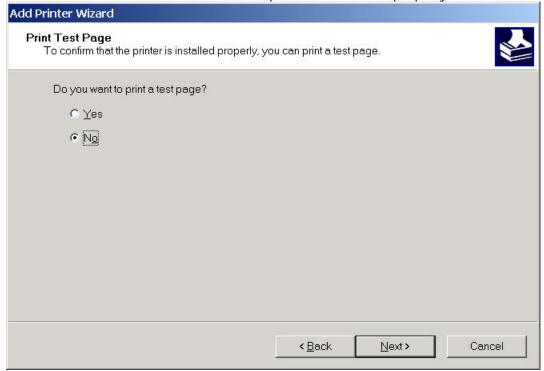

11. You have successfully added a new printer. Click Finish.

