

How Can I Setup Email Notifications?

Step 1: Log into your device using it's IP address, for example:

192.168.0.1

Step 2: Click on "SETUP" then "EMAIL SETTINGS"

Product Page : DIR-845L	<u> </u>			Hardware Version : A1	Firmware Version : 1.02
	(e-				
DIR-845L	SETUP	ADVANCED	TOOLS	STATUS	SUPPORT
ADMIN	EMAIL SETTINGS				Helpful Hints
TIME	The Email feature can b	e used to send the system	og files and router alert	messages to your email	You may want to
SYSLOG	address.				 More More
EMAIL SETTINGS	[Save Settings] [Don't :				
SYSTEM	EMAIL NOTIFICATIO	N			
FIRMWARE	Enable Email No				
DYNAMIC DNS					
SYSTEM CHECK	EMAIL SETTINGS				
SCHEDULES	From Emai	Address :			
	To Emai	Address :			
	Ema	il Subject :			
	SMTP Serve	Address :			
	SMTP Se	rver Port : 25			
	Enable Authe	ntication : 🔲			
	Acco	unt Name:			
	1	Password :			
	Verify	Password :	Send Mail Now]	
	EMAIL LOG WHEN FU	LL OR ON SCHEDULE			
	o	n Log Full : 📃			
	On	Schedule : 🔲			
		Schedule : Never 🔻			
		Detail :			
	Save Settings Don't	Save Settings			
WIRELESS					
	C	opyright © 2012 D-Li <u>nk Cor</u>	poration. All rights reser	ved.	



Step 3: Click inside the box "<u>Enable Email Notification</u>" then fill the EMAIL SETTINGS using the below example:



The above example was using a gmail account, if not using a gmail account you will need to check the **<u>SMTP Server Port</u>** your email provider uses.

Click on "Save Settings"

Product Page : DIR-845L	Hardware Version : A1	Firmware Version : 1.02
D-Link		
SAVING		
	The settings are being saved and are taking effect.	
	Please wait	
		<u>.</u>
WIRELESS		
	Copyright © 2012 D-Link Corporation. All rights reserved.	



Step 4: You can test the setup by clicking on "Send Mail Now"

Password :	•••••	
Verify Password :		Send Mail Now
(M	ail sent already!)	

You will recive the above message confirming that an email has been sent to your account.

End of Document.