

How to configure the DNR-322L as NVR + File Server, using the Wizard.

How to configure the DNR-322L as NVR + File Server, using the Wizard.

Before configuring the device as an NVR + File Server, please note that if it was configured only for NVR or just file storage, all information will be deleted from the discs.

For this configuration the device will need two hard drives, as setting NVR + File Server uses the first HDD as Volume 1 for NVR recording and the second HDD as Volume 2 for the file server.

- 1) Firstly, plug the network cable into your router and the DNR-322L and power up the device with the power button



- 2) Insert the CD that comes with the device and run the wizard.
- 3) If your operating system is MAC OS or you do not have the CD, you can download the installation wizard from the mydlink page.
(http://d2okd4tdjucp2n.cloudfront.net/DNR-322L_Setup_Wizard_mydlink_EU_v1.4.0.3_10212013.zip)

How to configure the DNR-322L as NVR + File Server, using the Wizard.



4) Run the wizard, select the language and click on the "START" button to start the configuration.

Select your Language:

English ▾

START ▶

5) Carefully follow the wizard steps until step "D" "Set HDD NVR".

How to configure the DNR-322L as NVR + File Server, using the Wizard.

Configurar HDD de NVR

AB C D E F G

Seleccione el modo disco duro para NVR.

Información del disco físico

Ranura	Vendedor	Modelo	Número de serie	Tamaño
R	Hitachi	HDS721010DLE630	MSK5235H0GAKSG	1000
L	Seagate	ST9320423AS	5VJ6687P	320 GB

Seleccione la configuración del disco duro

NVR + servidor de archivos Solamente NVR

NVR + Servidor de archivos: Puede utilizar la primera UDD con el volumen 1 para grabación NVR y la segunda UDD con el volumen 2 como servidor de archivos.

Aviso Importante: El siguiente paso será dar formato al disco duro, todos los contenidos existentes se borrarán! Si no quiere cambiar la configuración del disco duro, p favor omita este paso.

← ANTERIOR

Omitir →

SIGUIENTE →

 
Here you can select the hard drive configuration and check the "NVR + Server Files" option. Pique Next to begin formatting the hard drives.

Formateo de los discos duros

AB C D E F G

Se están formateando las unidades de su dispositivo, espere...

Volume_1 formateando




5%

Formateo de los discos duros

AB C D E F G

Se están formateando las unidades de su dispositivo, espere...

 Volume_2 formateando



27%

How to configure the DNR-322L as NVR + File Server, using the Wizard.

- 6) Once the format of pique Next to to assign a drive letter that corresponds to the storage device NVR network drives ended.

A B C D E F G


Asignar unidad a la redk

Elija una letra de unidad que se corresponderá con el dispositivo de almacenamiento en red.


Letra de la unidad disponible 1:

Letra de la unidad disponible 2: **Z:**

- 7) To continue configuration connect your camera to the computer and power cable to your network to follow the wizard and complete the configuration.

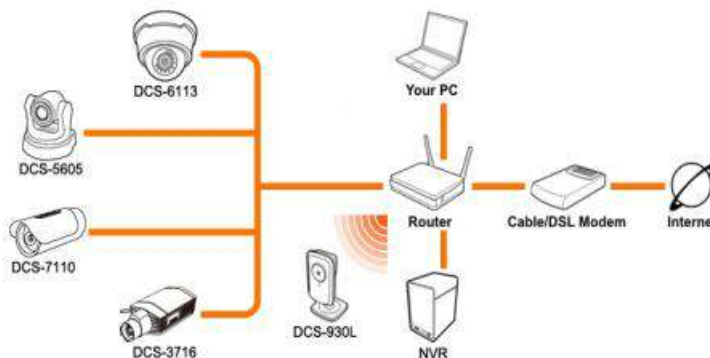

- 8) From my Pc or Team you can see the added drive Z:

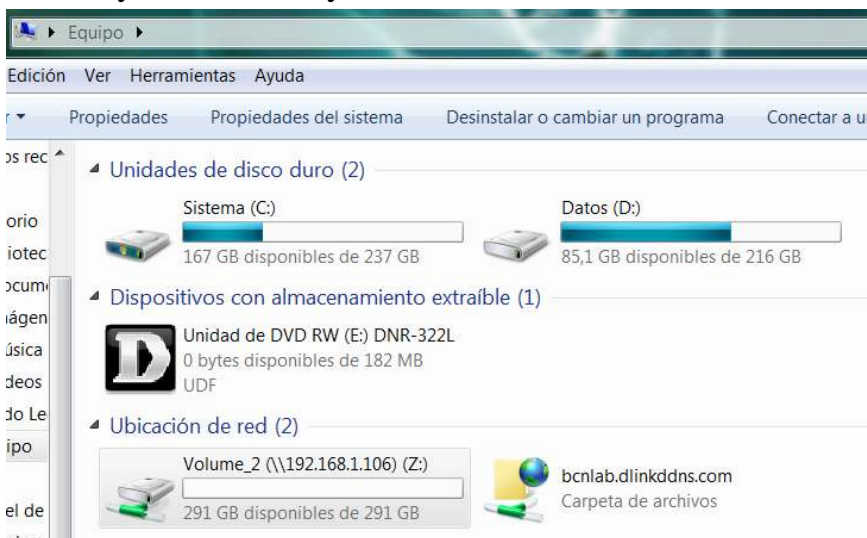

How to configure the DNR-322L as NVR + File Server, using the Wizard.

Since other computers can access the volume created by the following route: [\\192.168.1.106](http://192.168.1.106)

