

How to connect to DNS-345 via webdav in Windows?


How to connect to DNS-345 via webdav in Windows?

Step 1

Download BitKinex from <http://www.bitkinex.com/>
Install with default settings.


Step 2

Open BitKinex, and you will see a window like this:

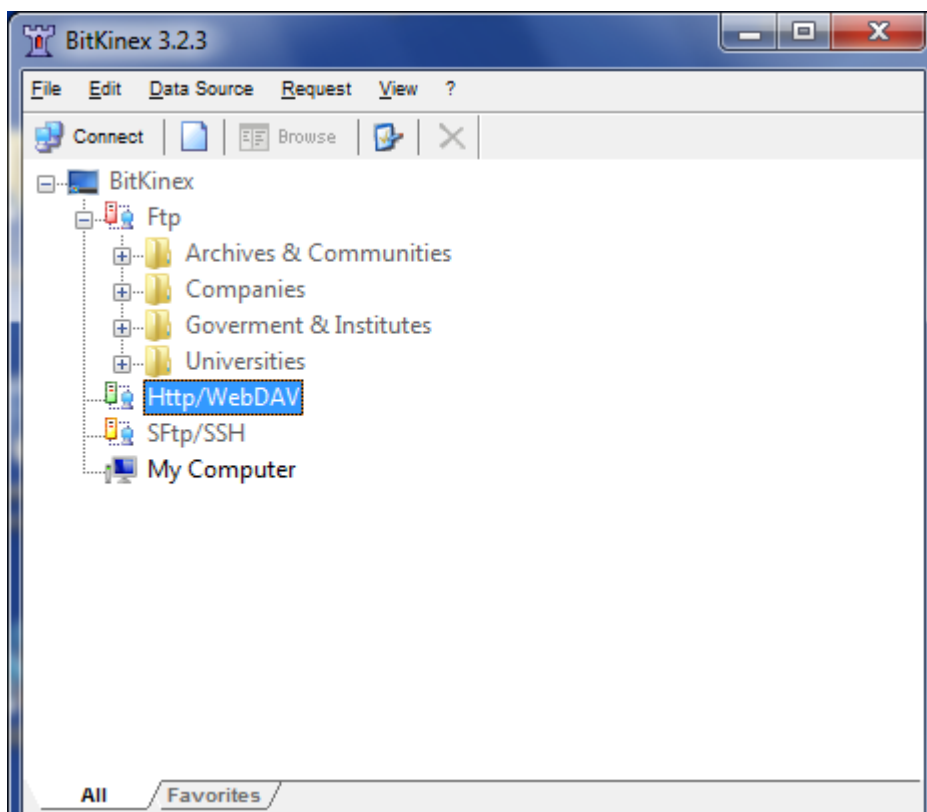


Right click on Http/WebDAV
Click New
Click Http/WebDAV

How to connect to DNS-345 via webdav in Windows?

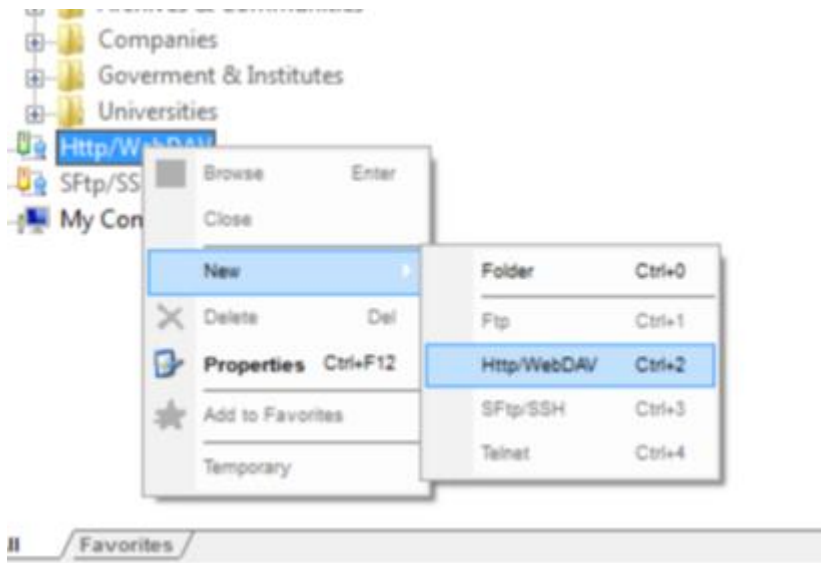

In the box that appears, type the name you want to call the connection, e.g. My NAS

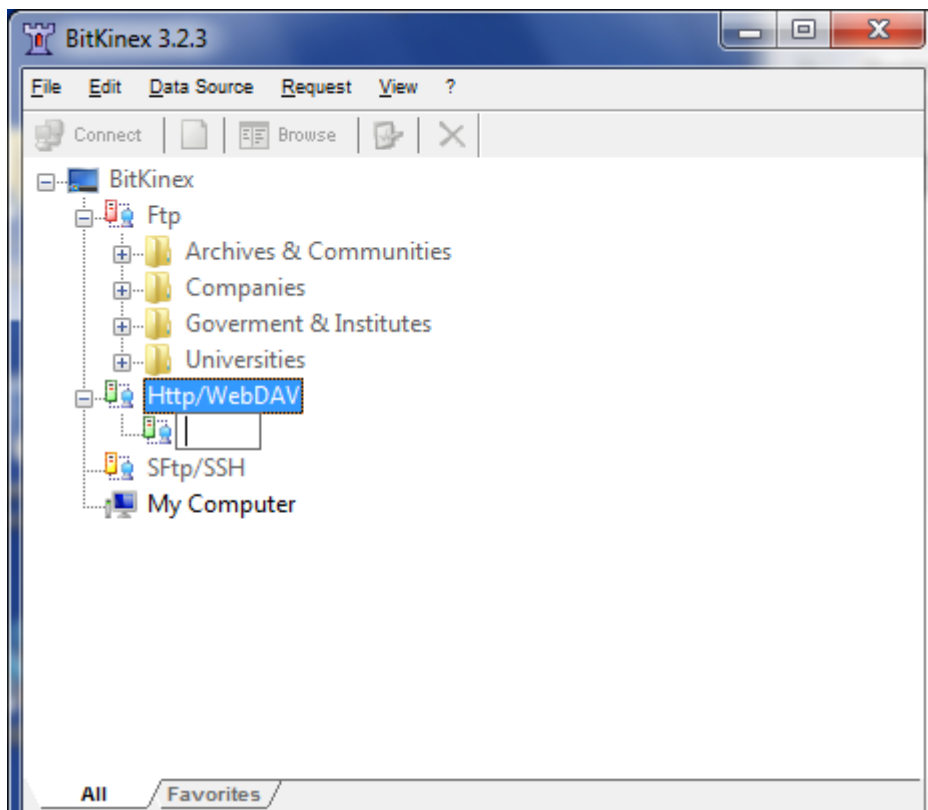


In the new window that appears, in the server address, type the IP or hostname you use to connect to your DNS-345

You can opt to use SSL or not

Type in a user and password that you have set for webdav access

How to connect to DNS-345 via webdav in Windows?

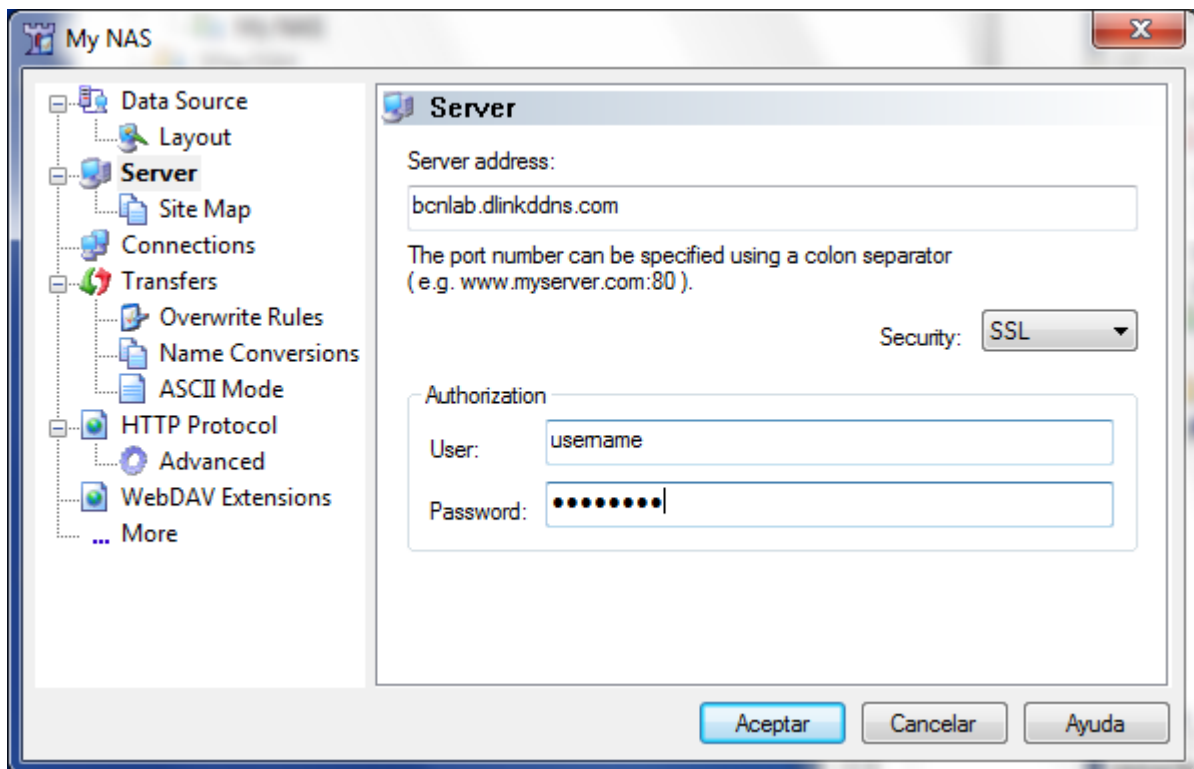

Click Site Map


Select the existing path

Change the path to read: /webdav/YOUR WEBDAV SHARE

(Where YOUR WEBDAV SHARE is the name/path of the folder you have set as a webdav share)

Click Update

How to connect to DNS-345 via webdav in Windows?

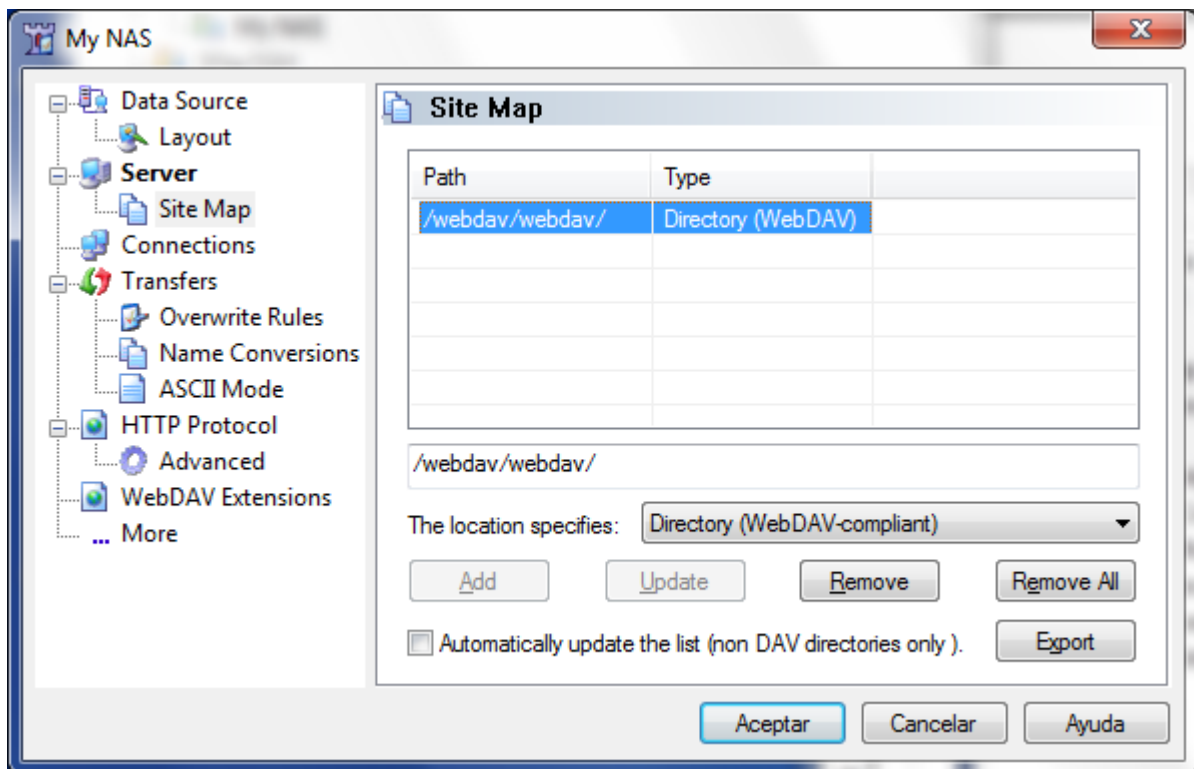

Click Accept

You can now right click the connection, and choose Browse to connect to your DNS-345 via WebDAV.